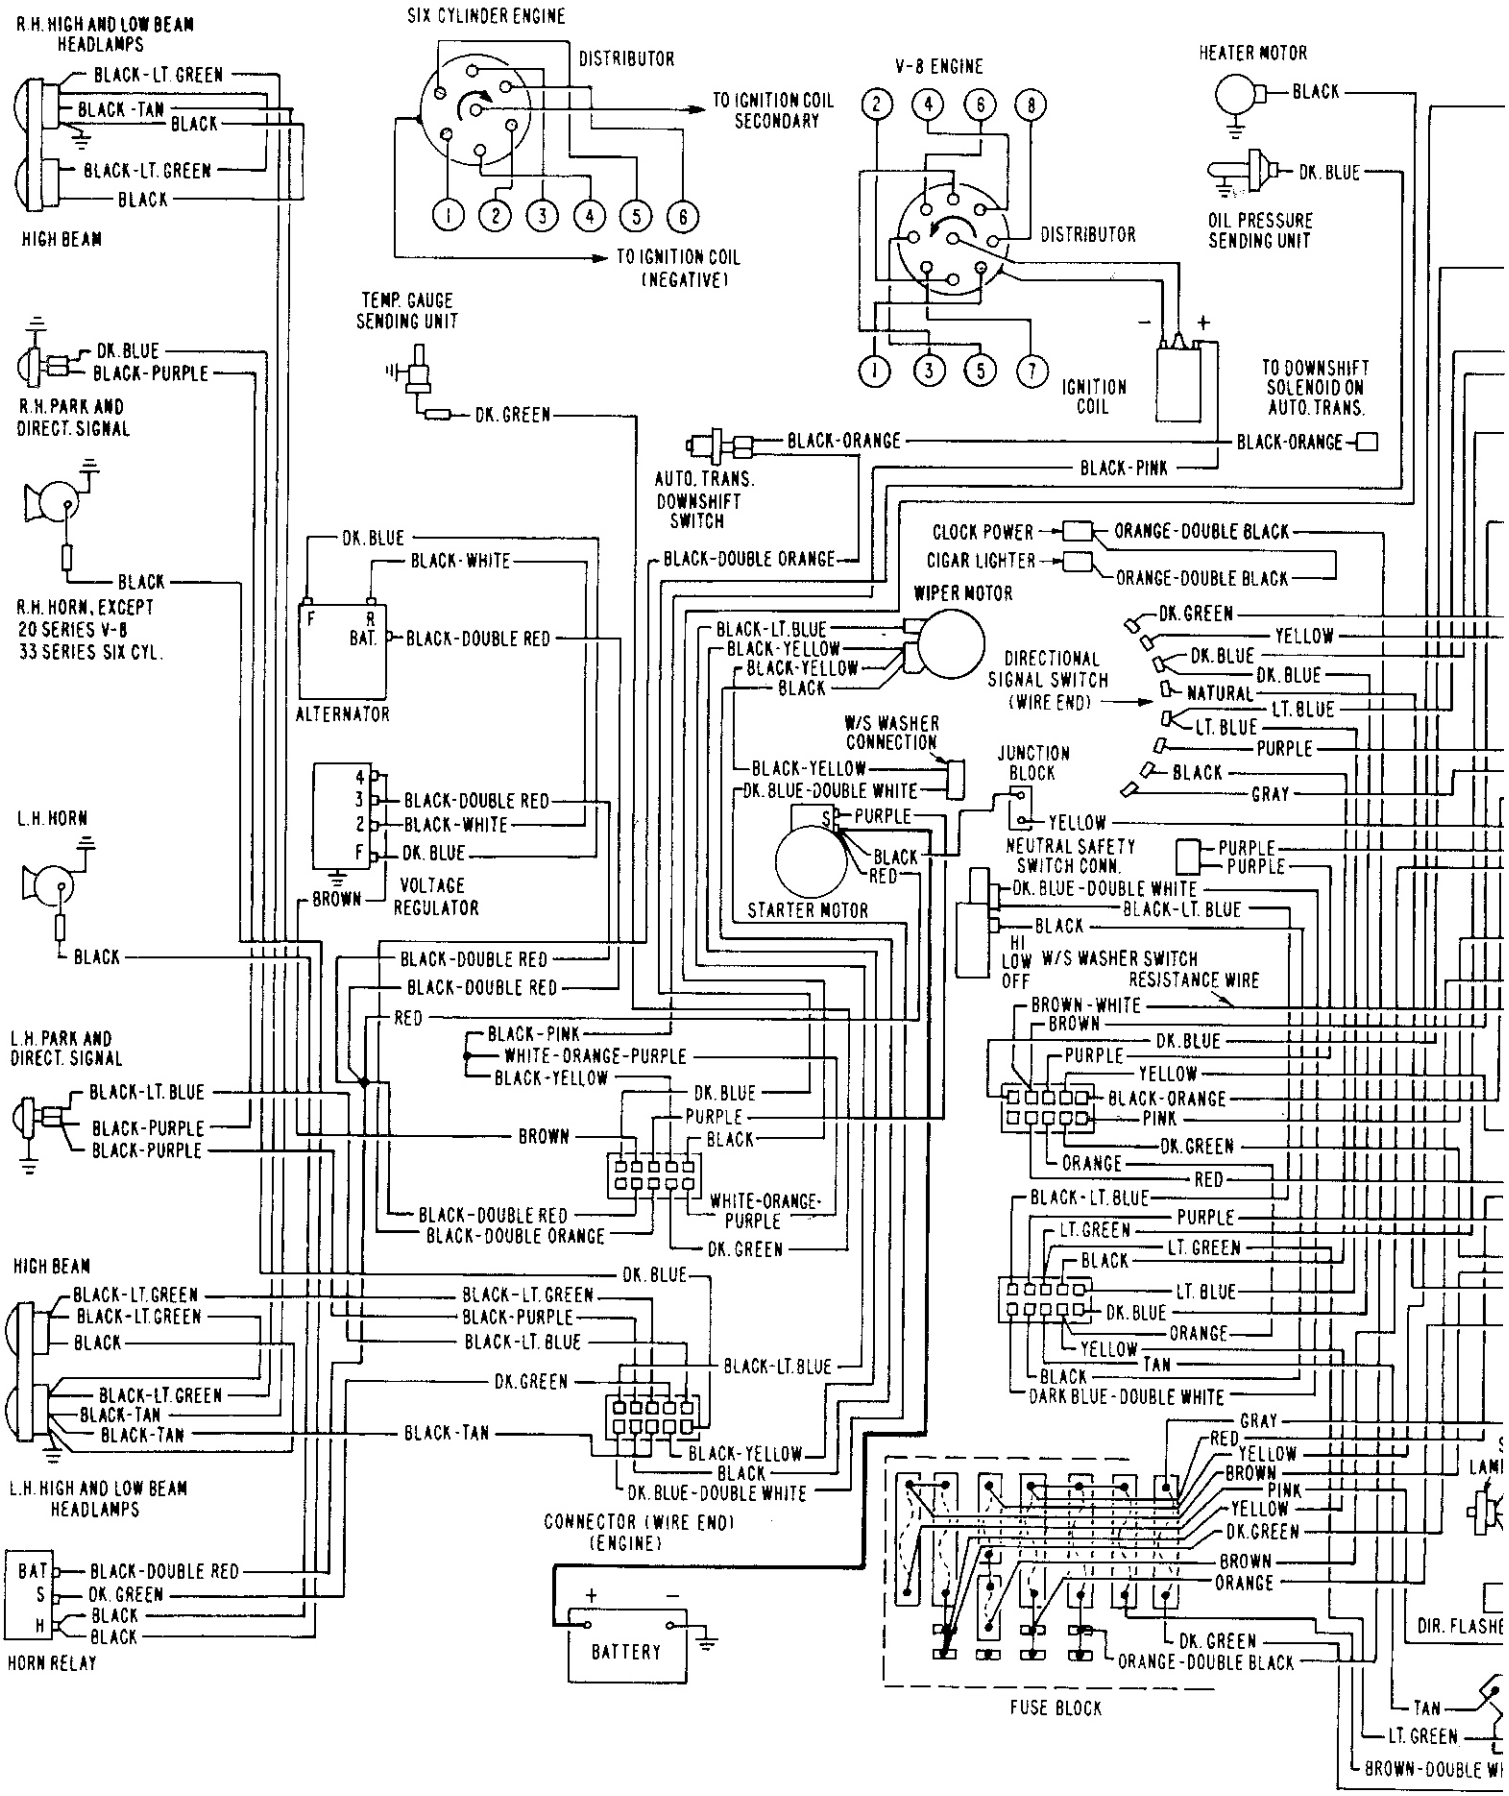

Chassis Wiring . . 1965

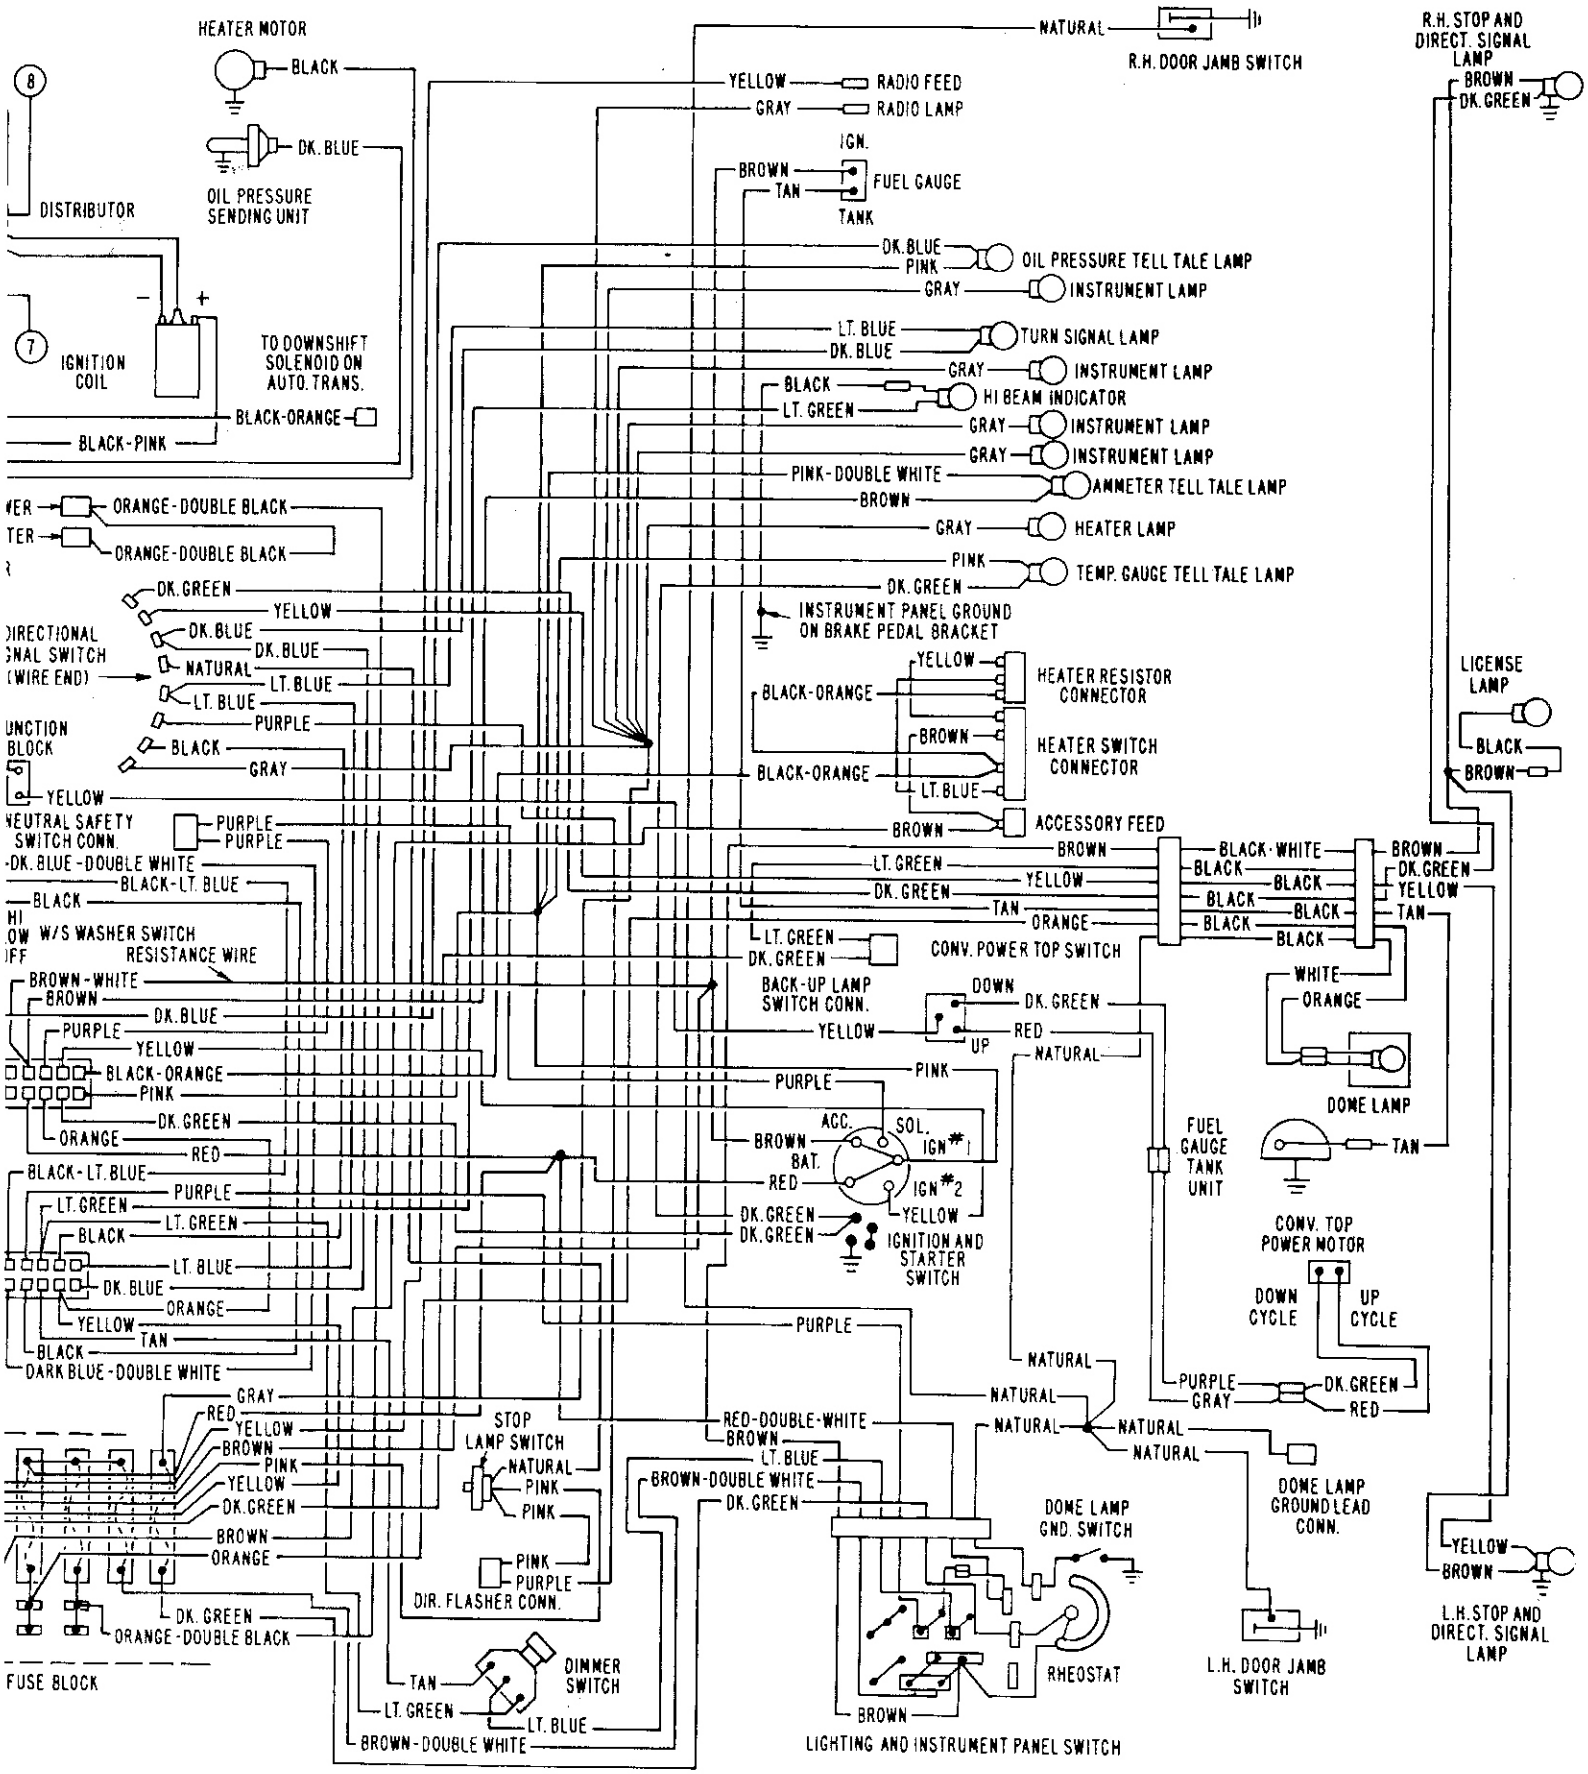
HEATER MOTOR
BLACK
DK. BLUE
OIL PRESSURE SENDING UNIT
DISTRIBUTOR
IGNITION COIL
TO DOWNSHIFT SOLENOID ON AUTO. TRANS.
BLACK-ORANGE
BLACK-PINK
ORANGE-DOUBLE BLACK
ORANGE-DOUBLE BLACK
DIRECTIONAL SIGNAL SWITCH (WIRE END)
JUNCTION BLOCK
NEUTRAL SAFETY SWITCH CONN.
W/S WASHER SWITCH
RESISTANCE WIRE
FUSE BLOCK
STOP LAMP SWITCH
DIR. FLASHER CONN.
DIMMER SWITCH
NATURAL
R.H. DOOR JAMB SWITCH
YELLOW
RADIO FEED
GRAY
RADIO LAMP
IGN.
BROWN
TAN
FUEL GAUGE
TANK
DK. BLUE
PINK
OIL PRESSURE TELL TALE LAMP
GRAY
INSTRUMENT LAMP
LT. BLUE
DK. BLUE
TURN SIGNAL LAMP
GRAY
INSTRUMENT LAMP
BLACK
LT. GREEN
HI BEAM INDICATOR
GRAY
INSTRUMENT LAMP
GRAY
INSTRUMENT LAMP
PINK-DOUBLE WHITE
BROWN
AMMETER TELL TALE LAMP
GRAY
HEATER LAMP
PINK
DK. GREEN
TEMP. GAUGE TELL TALE LAMP
INSTRUMENT PANEL GROUND ON BRAKE PEDAL BRACKET
HEATER RESISTOR CONNECTOR
HEATER SWITCH CONNECTOR
ACCESSORY FEED
CONV. POWER TOP SWITCH
BACK-UP LAMP SWITCH CONN.
DOWN
UP
ACC.
SOL.
BAT.
IGN #1
IGN #2
IGNITION AND STARTER SWITCH
FUEL GAUGE TANK UNIT
DOME LAMP
CONV. TOP POWER MOTOR
DOWN CYCLE
UP CYCLE
DOME LAMP GND. SWITCH
DOME LAMP GROUND LEAD CONN.
RHEOSTAT
L.H. DOOR JAMB SWITCH
LIGHTING AND INSTRUMENT PANEL SWITCH
R.H. STOP AND DIRECT. SIGNAL LAMP
LICENSE LAMP
L.H. STOP AND DIRECT. SIGNAL LAMP